 


Start Here

Ultra Hi-Definition RX680 Photo All-in-One

1

 
Unpack

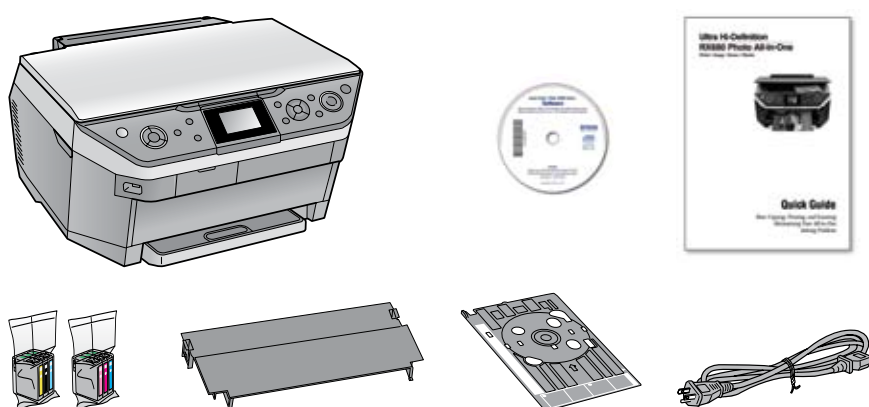

Caution: Do not open ink cartridge packages until you are ready to install the ink. Cartridges are vacuum packed to maintain reliability.

If anything is missing, contact Epson® as described on the back in “Any questions?”.


Remove all the tape.

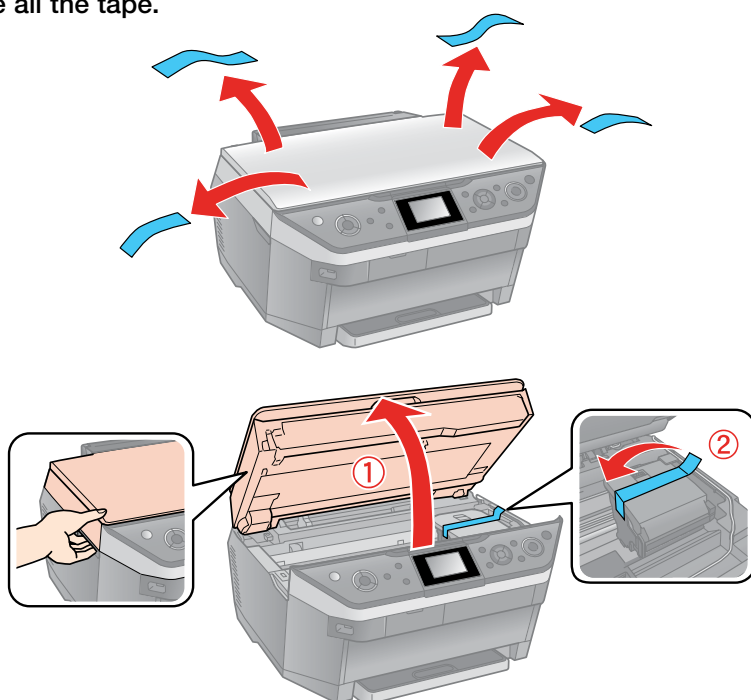


2

Connect USB cable

 - 1 Make sure the scanner is open.

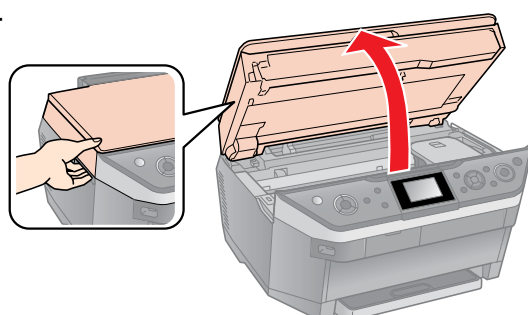

 
- 2 Connect the USB cable (not included) and route it through the slot.

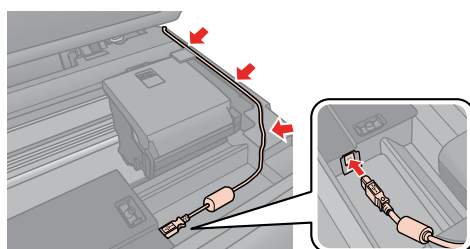


411016800

EPSON®
EXCEED YOUR VISION

 - 3** Close the scanner.

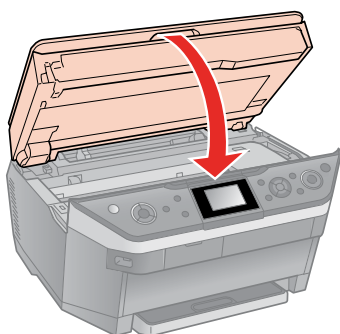

 
Note: Don't connect the RX680 Series to the computer yet.

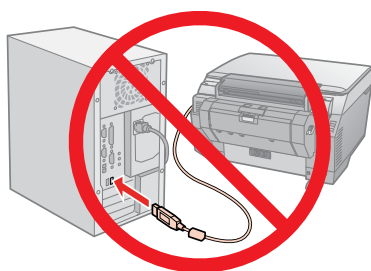


3

Turn on the RX680 Series

 - 1** Connect the power cable.

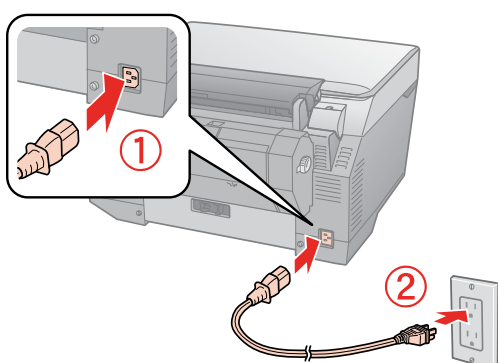

- 2** Press the  On button.

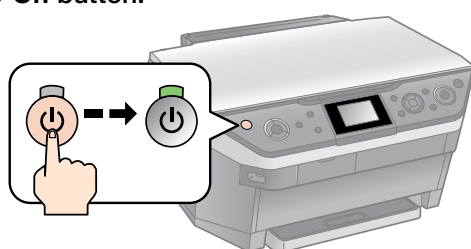 


4

Install ink cartridges


Note: Don't load paper before installing the ink cartridges.

- 1** Lift up the scanner.

 - 2** Open the cartridge cover.

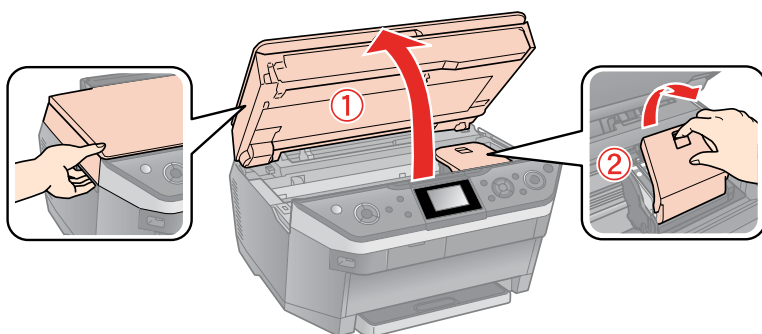


- 3** Unpack the ink cartridges.

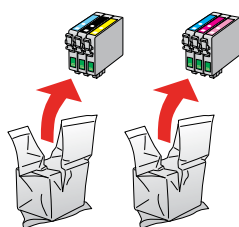 


- 4** Remove only the yellow tape from each cartridge.

 
Caution: Don't remove any other seals from the cartridges.

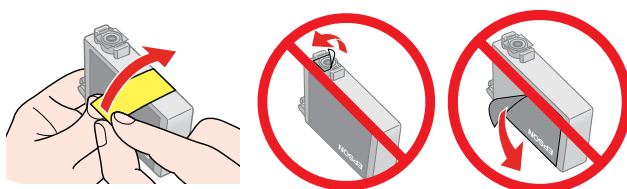

 
- 5** Insert the cartridges in the holder for each color.

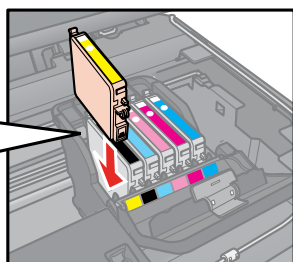

 
- 6** Press the cartridges down until they click.

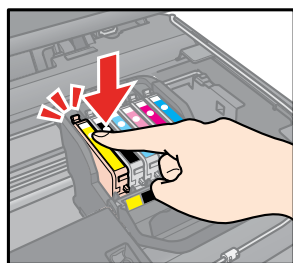

 
- 7** Close the ink cartridge cover and press it down until it clicks.

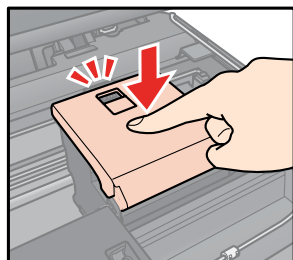

- 8** Close the scanner.

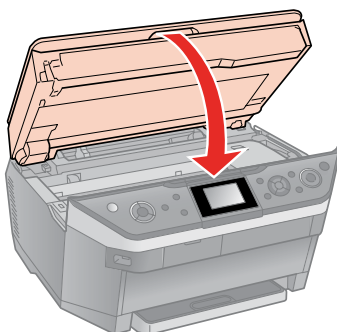 

 - 9** Press the **OK** button to charge ink. Charging takes about 2 1/2 minutes.

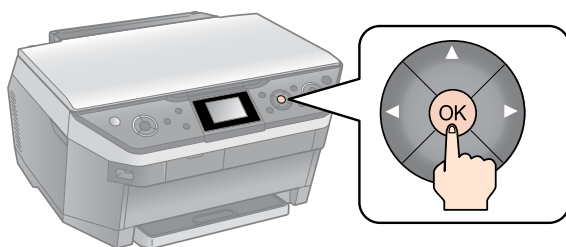


Caution: Don't turn off the RX680 Series while the  **On** light is flashing or you'll waste ink.


5 Load paper

Rear sheet feeder

 
- 1** Open the paper support and pull up its extension.

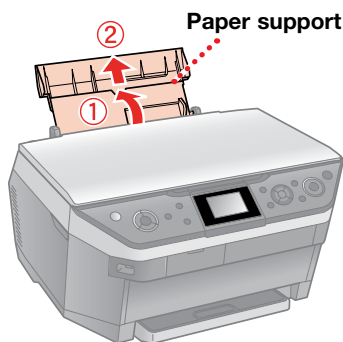

- 2** Slide the edge guide to the left.

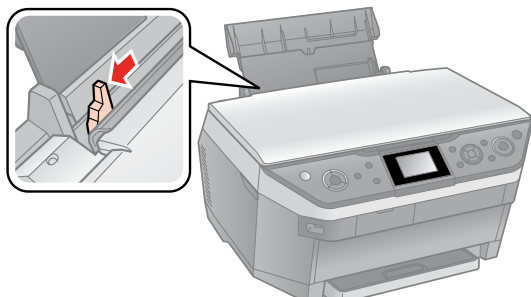 

 
- 3** Load paper against the right edge guide and behind the tab, with the printable side face up.

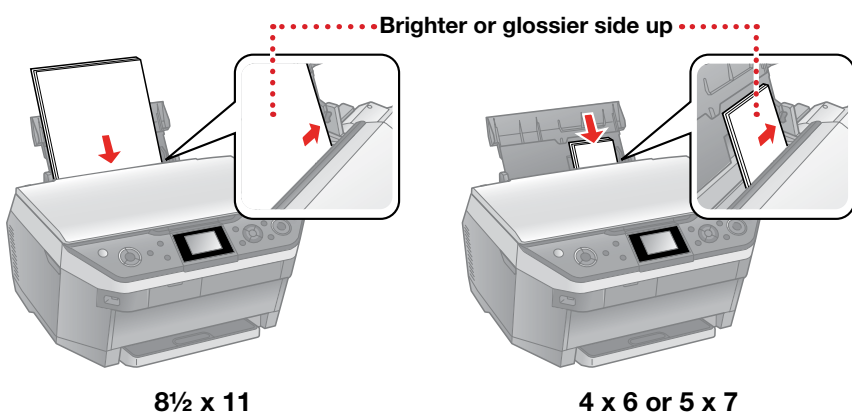

Note: Don't load the paper sideways; always load it short edge first.




 - 4** Slide the edge guide over.

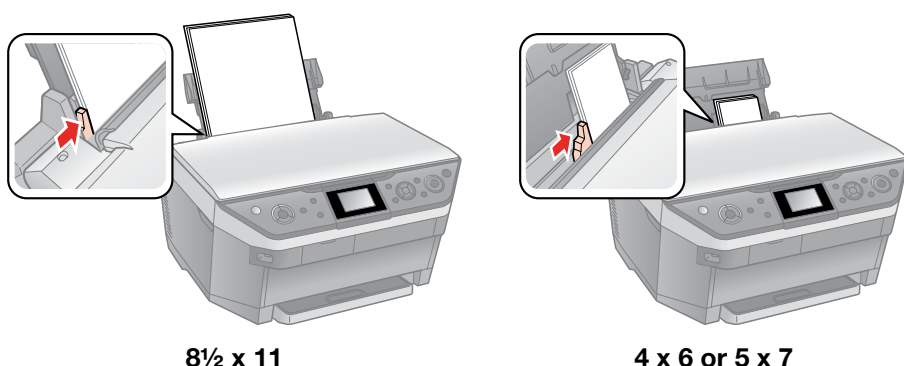


Front paper cassette

 
- 1** Pull out the paper cassette.

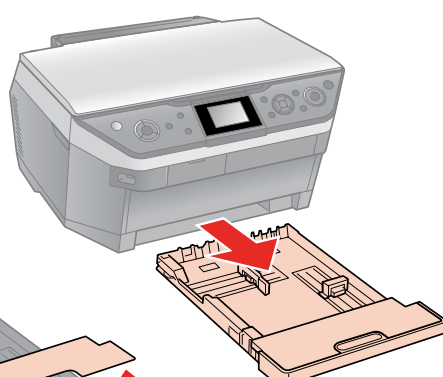

- 2** Lift off the cover.

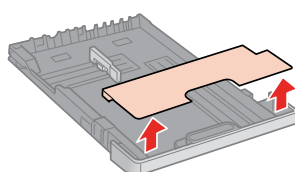 


 - 3** Press in the tab on each edge guide and slide them to fit the paper you are loading.

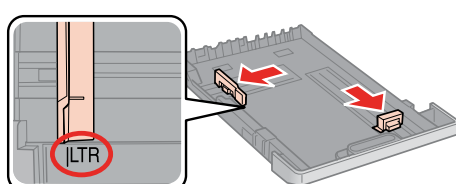


- 4** Load paper with the printable side face down.

 Note: Don't load paper above the arrow mark inside the paper guide.

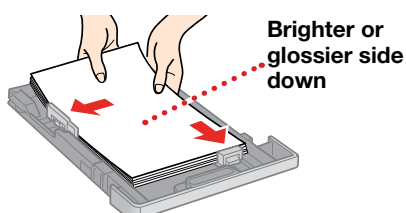


- 5** Fit the edges of the paper against the paper guides.

 Note: Make sure the paper fits properly.

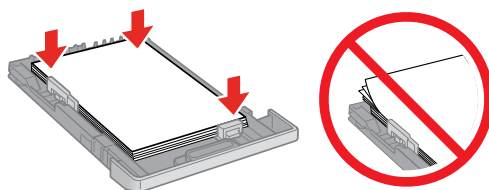

 
- 6** Replace the cover and insert the cassette back into the printer.

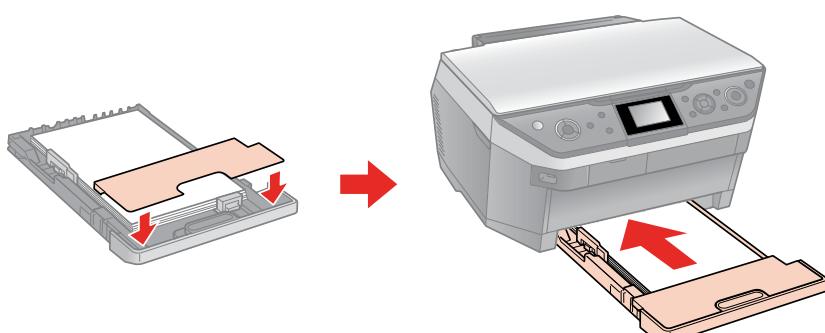

6

Open the output tray

 Open and extend the output tray, then open the output tray extension.

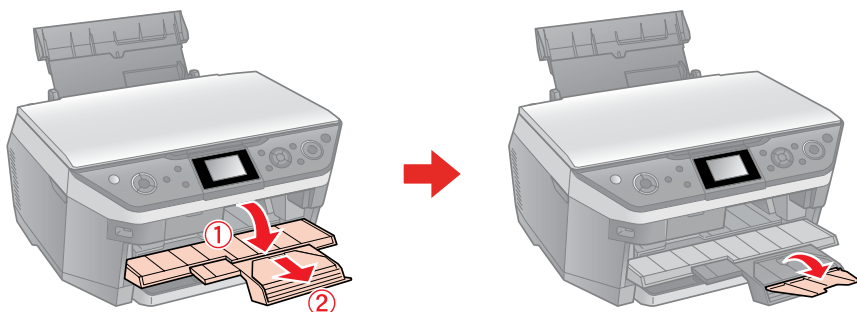


7

Install software

Your software works with Windows® 2000, XP, XP Professional x64 Edition, Windows Vista™, and **Macintosh® OS X 10.2.8, 10.3.9 or later.**

Windows

 
- 1 Make sure the RX680 Series is **NOT CONNECTED** to your computer.

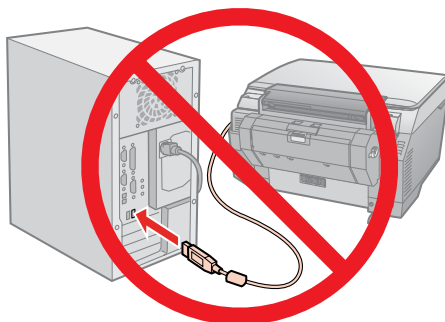

Note: If you see a Found New Hardware screen, click **Cancel** and disconnect the USB cable. You can't install your software that way.



 - 2 Insert the **RX680 Series** software CD.

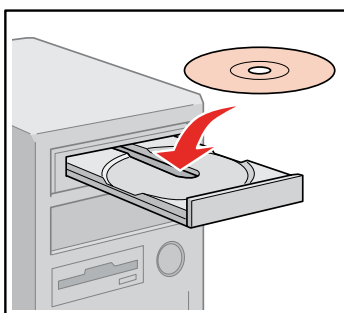

With Windows Vista, if you see the AutoPlay window, click **Run Epssetup.exe**. When you see the User Account Control screen, click **Continue**.

- 3 Click **Install** and follow the on-screen instructions.

 


- 4** When you see this screen, click the first option and then click **Next**, *unless* the RX680 Series is connected to your computer through an external print server.

If you're using an external print server, click the second option, click **Next**, then skip to step 6.



- 5** When prompted, connect the USB cable. Use any open USB port on your computer.

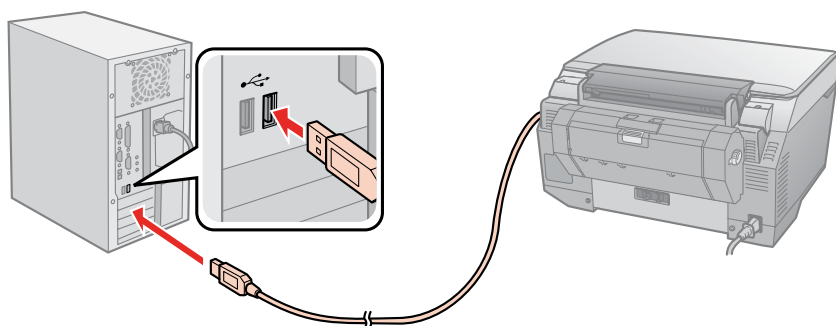


Note: If installation doesn't continue after a moment, make sure you securely connected and turned on the RX680 Series.

- 6** When you're done, remove the CD.

You're ready to copy, print, and scan! See your *Quick Guide* or on-screen *User's Guide*.

Macintosh

 - 1** Insert the RX680 Series software CD.

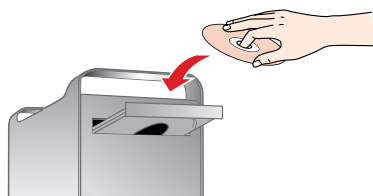


- 2** Double-click the **Epson** icon.


- 3** Click **Install** and follow the on-screen instructions.



 - 4** When prompted, connect the USB cable. Use any open USB port on your computer. Make sure the RX680 Series is securely connected and turned on.

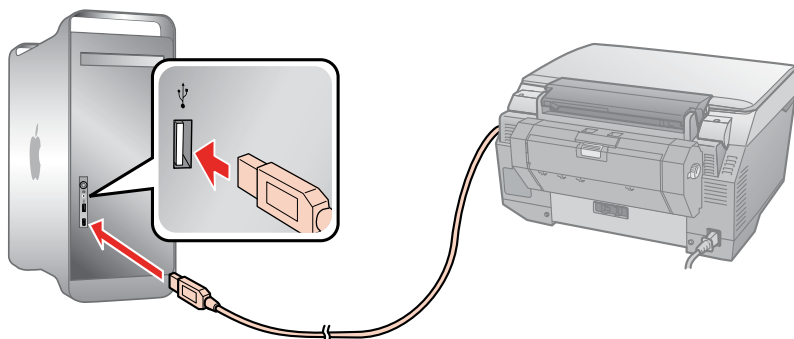

 - 5** When you see this screen, click **Open the Printer List**.

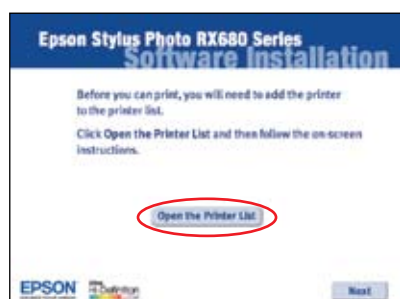

- 6** Follow the steps on the right side of the screen to add the RX680 Series.



- 7** Click **Next** again, if necessary.

- 8** When you're done, eject the CD.

You're ready to copy, print, and scan! See your *Quick Guide* or on-screen *User's Guide*.

Any questions?

Look here for answers:

Quick Guide

Basic steps for using the RX680 Series to copy, print, and scan with and without a computer.



On-screen *Epson Information Center*

Click the desktop shortcut for easy access to the RX680 Series *User's Guide*, FAQs, online troubleshooting advice, and software downloads. You can also purchase paper and ink.



On-screen help with your software

Select **Help** or **?** when you're using your software.

Epson Technical Support:

Internet Support

Visit Epson's support website at epson.com/support and select your product for solutions to common problems. You can download drivers and documentation, get FAQs and troubleshooting advice, or e-mail Epson with your questions.

Speak to a Support Representative

Call (562) 276-4382 (U.S.), 6 AM to 6 PM, Pacific Time, Monday through Friday or (905) 709-3839 (Canada), 6 AM to 6 PM, Pacific Time, Monday through Friday. Toll or long distance charges may apply.

Software Technical Support

ArcSoft PhotoImpression™

(510) 440-9901

Web: www.arcsoft.com

Need paper and ink?

Want great results? Simple. Use genuine Epson paper and ink. For the right supplies at the right time, you can purchase them at Epson Supplies CentralSM at www.epson.com/ink3 (U.S. sales) or www.epson.ca (Canadian sales). You can also purchase supplies from an Epson authorized reseller. To find the nearest one, call 800-GO-EPSON (800-463-7766).



Ultra Premium Photo Paper Glossy

Instant-drying heavyweight paper for long-lasting, high gloss photos. Suitable for framing or special occasions.

See the entire line of Epson photo papers at Epson Supplies Central.

Genuine Epson Inks



Look for the numbers below to find your cartridges. It's as easy as remembering your number!



78 Black



78 Magenta



78 Cyan



78 Light Magenta



78 Light Cyan



78 Yellow



Try the High Capacity 77 cartridges available at www.epson.com/highcapacity (U.S. sales), www.epson.ca (Canadian sales), or the 77 color multipack at your local reseller.

Epson and Epson Stylus are registered trademarks, Exceed Your Vision and Claria are trademarks, and Supplies Central is a service mark of Seiko Epson Corporation.

General Notice: Other product names used herein are for identification purposes only and may be trademarks of their respective owners. Epson disclaims any and all rights in those marks.

© 2007 Epson America, Inc. 5/07

CPD-23847

Cut out the card to the right and keep it with you when purchasing replacement ink cartridges.

Epson® RX680 Series Ink Cartridges

High Capacity 77 series cartridges are also available at www.epson.com/highcapacity (U.S. sales) or www.epson.ca (Canadian sales).

78 Black

78 Cyan

78 Light Cyan

78 Magenta

78 Light Magenta

78 Yellow